



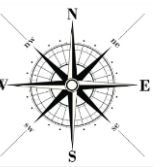

ENGLEWOOD CONTROL POINT MAP 2023

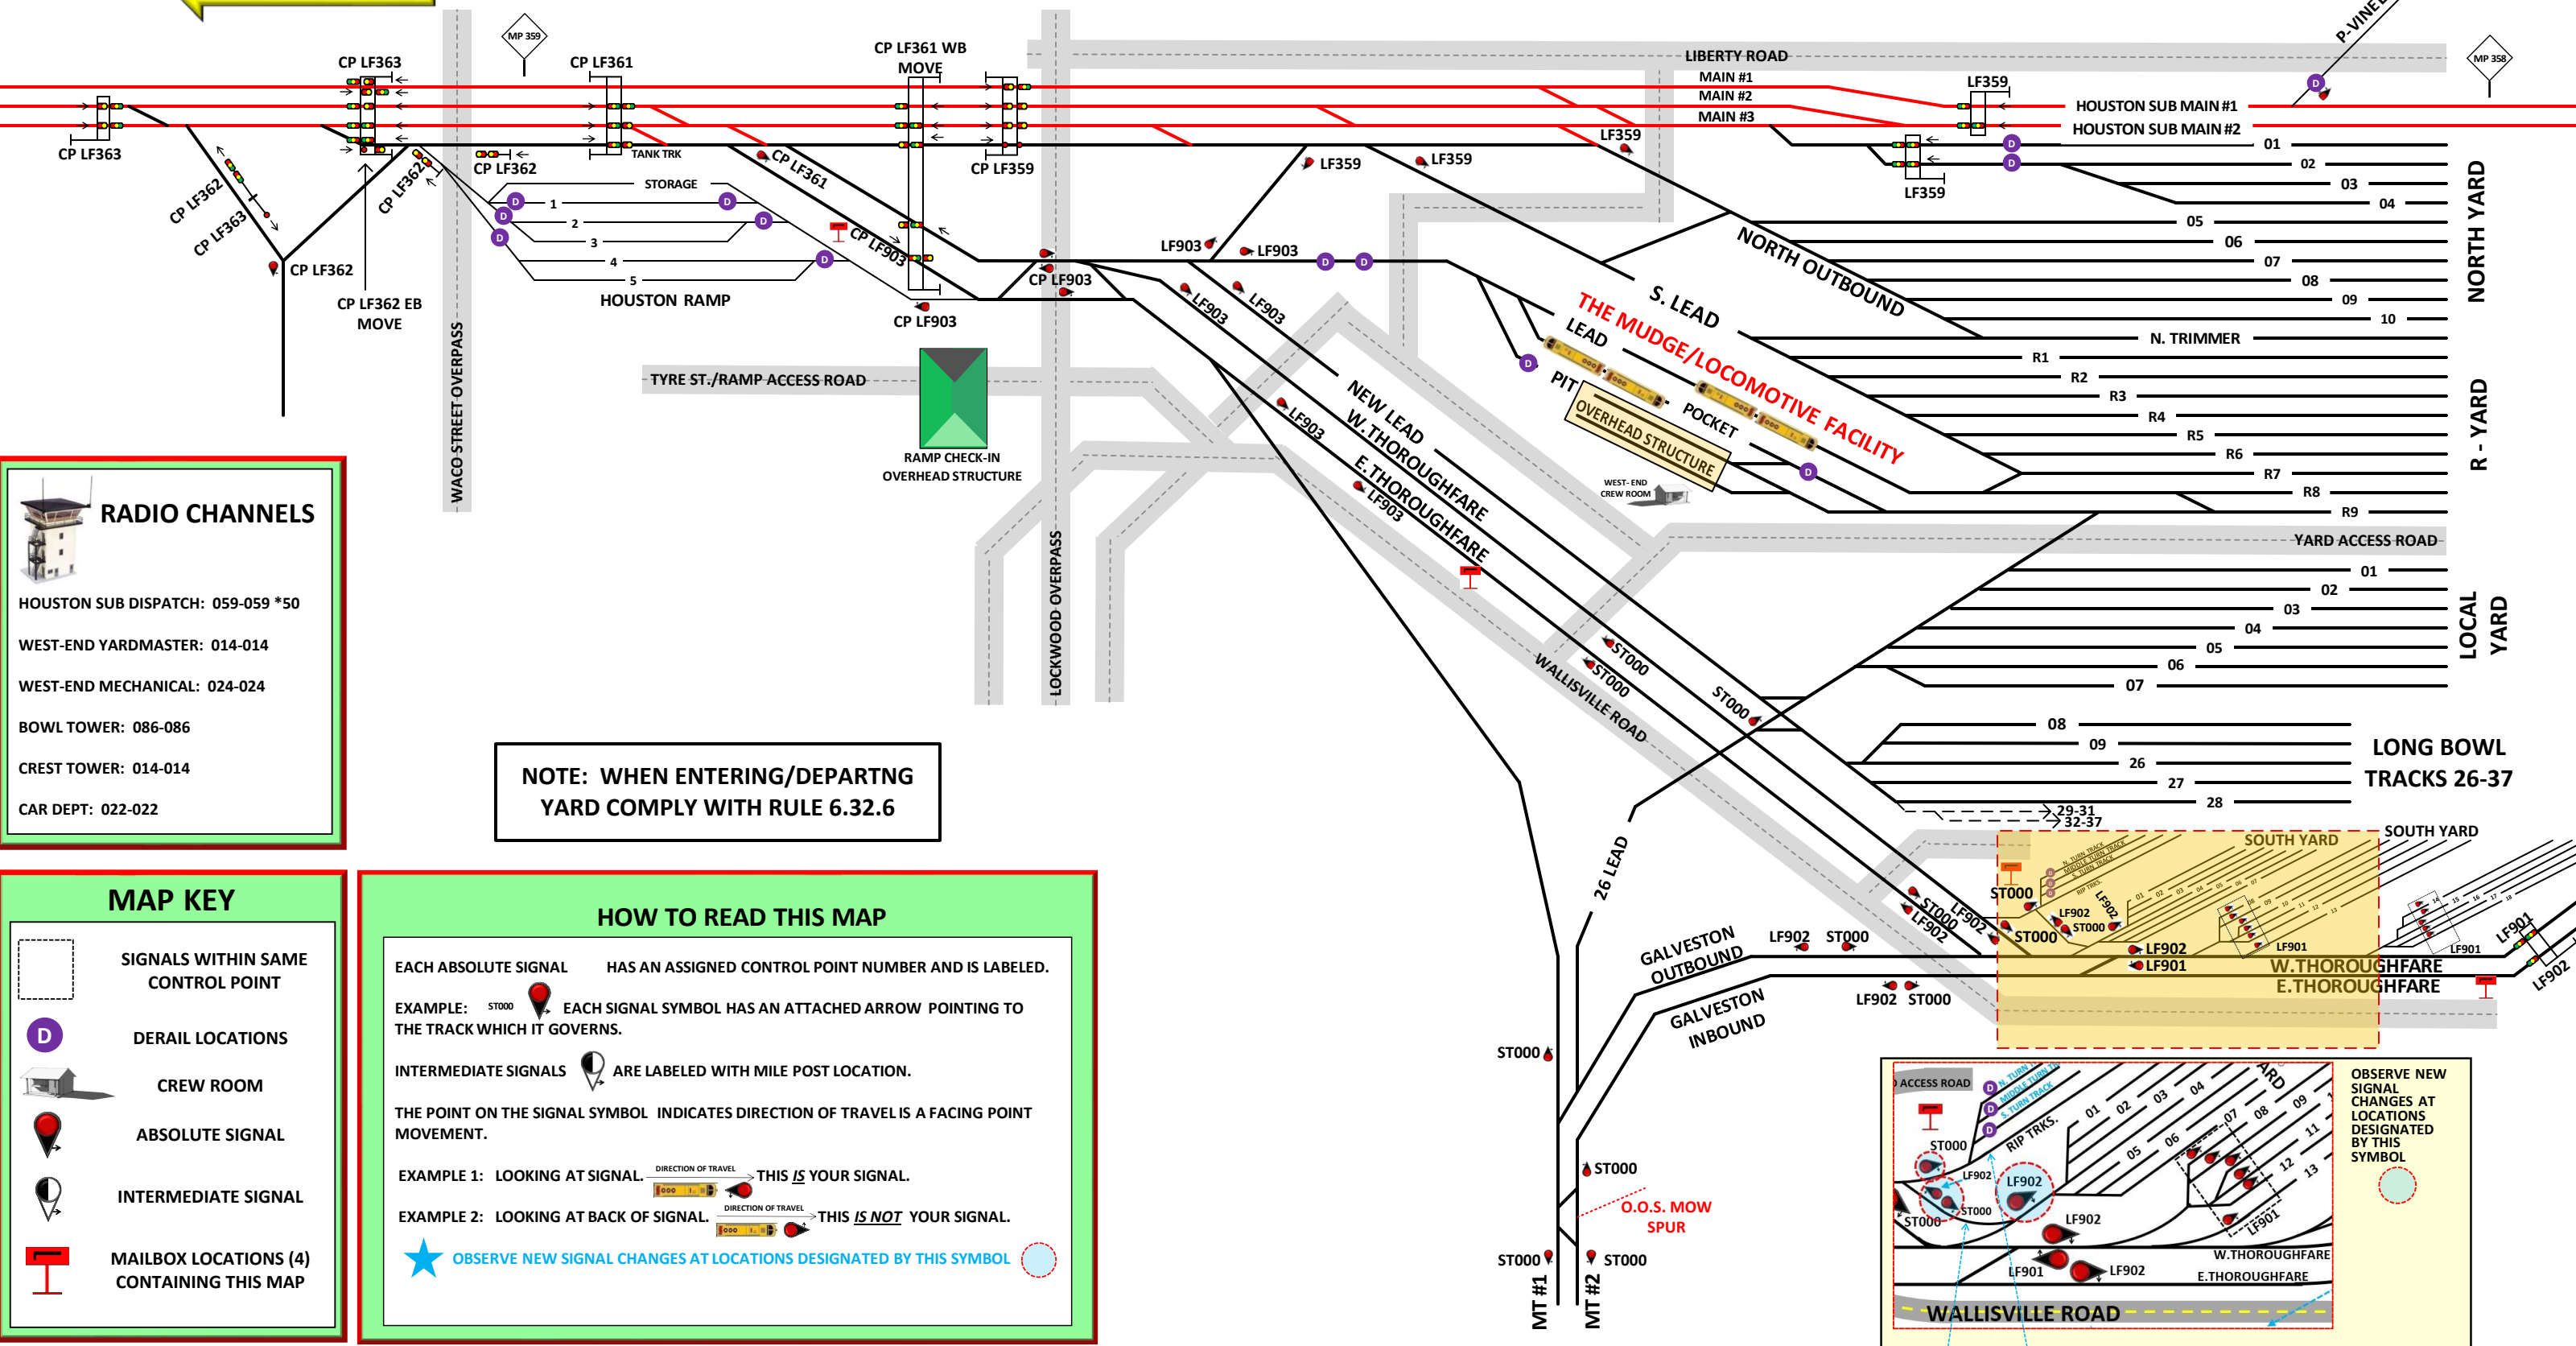

TO BRINGHURST



RADIO CHANNELS

- HOUSTON SUB DISPATCH: 059-059 *50
- WEST-END YARDMASTER: 014-014
- WEST-END MECHANICAL: 024-024
- BOWL TOWER: 086-086
- CREST TOWER: 014-014
- CAR DEPT: 022-022

NOTE: WHEN ENTERING/DEPARTNG YARD COMPLY WITH RULE 6.32.6

MAP KEY

- SIGNALS WITHIN SAME CONTROL POINT
- DERAIL LOCATIONS
- CREW ROOM
- ABSOLUTE SIGNAL
- INTERMEDIATE SIGNAL
- MAILBOX LOCATIONS (4) CONTAINING THIS MAP

HOW TO READ THIS MAP

EACH ABSOLUTE SIGNAL HAS AN ASSIGNED CONTROL POINT NUMBER AND IS LABELED.

EXAMPLE: EACH SIGNAL SYMBOL HAS AN ATTACHED ARROW POINTING TO THE TRACK WHICH IT GOVERNS.

INTERMEDIATE SIGNALS ARE LABELED WITH MILE POST LOCATION.

THE POINT ON THE SIGNAL SYMBOL INDICATES DIRECTION OF TRAVEL IS A FACING POINT MOVEMENT.

EXAMPLE 1: LOOKING AT SIGNAL THIS IS YOUR SIGNAL.

EXAMPLE 2: LOOKING AT BACK OF SIGNAL THIS IS NOT YOUR SIGNAL.

OBSERVE NEW SIGNAL CHANGES AT LOCATIONS DESIGNATED BY THIS SYMBOL

SOUTH YARD

OBSERVE NEW SIGNAL CHANGES AT LOCATIONS DESIGNATED BY THIS SYMBOL

RIP POCKET RIP LEAD

MAP UPDATED 06/19/23

